

# I LOVE MY PANASONIC I WANT TO PRESERVE IT

The secret to a long life  
for your clipper?

Daily maintenance. It takes less  
than 3 minutes.

MINIMUM  
3 time  
per day\*  
FREQUENCY

## UPKEEP AND LUBRICATION OF THE CUTTING BLADE


1

Depending on the model, I place  
the wheel on **2 mm** to remove  
the cutting blade.



2

I remove the small hairs with  
the Panasonic brush provided.

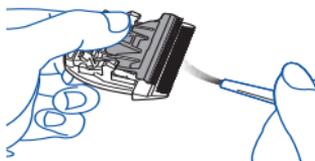

3

Then I lubricate using  
the **Panasonic Oil** or the **Fresh  
Oiler Maintenance Spray**, the  
only formula recommended by  
Panasonic for use on its clippers.



4

If necessary, for a refrigerant  
action, I spray longer without  
removing the cutting blade.



\*When the clipper is new, you must lubricate the cutting blade before its first use.

**Panasonic**  
for Professionals

# BATTERY INSTRUCTIONS

When the clippers are new, you must allow for **AN INITIAL CHARGING TIME** to optimize the performance of your batteries.

## BEFORE THE FIRST USE



- ER-FGP86
- ER-FGP84
- ER-FGP82
- ER-FGP74



- ER-FGP72
- ER-1512



- ER-GP21
- ER-GP30

## SUBSEQUENT RECHARGING TIME



- ER-FGP86
- ER-FGP84
- ER-FGP82

- ER-FGP74
- ER-FGP72
- ER-1512



- ER-GP21
- ER-GP30



For the ER-GP21, when you're not using it, keep it in its base.

## CHARGE INDICATORS



When the battery level light blinks **green** or **white**, it's time to recharge your clipper.

The clipper can be used for **5 more** minutes after this light flashes.



During the recharging, the light is **solid red**.



It **flashes red** when the charge is **complete**

We wish you pleasant cutting and we're available on the site: [panasonic.tema.fr](http://panasonic.tema.fr)