

Panasonic

I LOVE MY PANASONIC I WANT TO PRESERVE IT

The secret to a long life for
your clipper?

Daily maintenance. It takes less
than 3 minutes.

MINIMUM
3 time
per day*
FREQUENCY

UPKEEP AND LUBRICATION OF THE CUTTING BLADE

 
1

Depending on the model, I place the dial on **2 mm**, or **1.5 mm** for the Fading ER-GP86, to remove the cutting blade.



2

I remove the small hairs with the Panasonic brush provided.




3

Then I lubricate using the **Panasonic Oil** or the **Fresh Oiler Maintenance Spray**, the only formula recommended by Panasonic for use on its clippers.



4

If necessary, for a refrigerant action, I spray longer without removing the cutting blade.

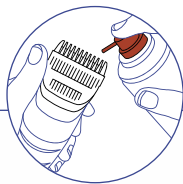

***WHEN THE CLIPPER IS NEW, YOU MUST LUBRICATE
THE CUTTING BLADE BEFORE ITS FIRST USE.**

MAKE ART

for Professionals



BATTERY INSTRUCTIONS

When the clippers are new, you must allow for **AN INITIAL CHARGING TIME** to optimize the performance of your batteries.

BEFORE THE FIRST USE



- ER-GP90
- ER-GP86
- ER-GP84
- ER-GP82
- ER-GP74
- ER-GP23
- ER-SP20
- ER-GP72
- ER-1512
- ER-1421
- ER-GP21
- ER-GP30

SUBSEQUENT RECHARGING TIME



- ER-GP86
- ER-GP84
- ER-GP82
- ER-GP74
- ER-GP72
- ER-1512
- ER-1421
- ER-GP23
- ER-SP20



- ER-GP90



- ER-GP21
- ER-GP30

CHARGE INDICATORS

At the initial charging, please wait for 2 or 3 minutes before red light appears.



When the battery level light blinks **green** or **white**, it's time to recharge your clipper.

The clipper can be used for **5 more** minutes after this light flashes.



During the recharging, the light is **solid red**.



It **flashes red** or **light off** when the charge is **complete**

We wish you pleasant cutting and we're available on the site: panasonic.tema.fr

Panasonic
for Professionals